

### **8. Read Diagnostic Trouble Code (DTC)**

#### **A: OPERATION**

For details about reading of DTCs, refer to “Airbag System (Diagnosis) Subaru Select Monitor”. <Ref. to AB(diag)-30, Subaru Select Monitor.>